

ETHERNET OF WIFI INSTRUCTIE

TECHNISCHE SPECIFICATIES SPELER

Model: HD 2214
CPU: 4 Core Cortex A57
RAM: 2 GB
ROM: 1 GB
Voeding: USB via het scherm (kabel meegleverd)

INTERNET VIA ETHERNET

1. Een standaard internetverbinding is voldoende.
2. Upload: >1 Mbps, Download: >1 Mbps

INTERNET VIA WIFI


1. Upload: >1 Mbps, Download: >1 Mbps
2. Latentie: 150ms of beter
3. WiFi Signal Sterkte (RSSI): -55 dBm of sterker
4. Uptime: bij voorkeur hebben we 24/7 een constante en betrouwbare netwerkverbinding.

BEVEILIGING

We leveren desgewenst het Lan of Wifi MAC-adres van de speler uit.

INSTELLINGEN IN DE SPELER

Meestal sluiten onze monteurs de speler aan op het netwerk. Mocht dat niet het geval zijn, dan kun je het volgende doen: Steek een muis in één van de poorten van de speler. Ga met je muis naar de linkerbovenhoek van het scherm en klik 5x snel op de linkermuisknop. Nu zul je zien dat er een scherm verschijnt met alle eigenschappen van de speler, inclusief de netwerkverbindingen. Ga naar Network & Internet, dan naar Wi-Fi. Je kunt nu klikken op de wifi-verbinding en het wachtwoord ingeven. Is je wachtwoord lang of ingewikkeld, steek in de andere usb-poort van de speler een toetsenbord. De tijd is zeer kort om het wachtwoord in te stellen. Is de tijd echt te kort: ga naar Apps&Notifications. Klik op Look Player. Dan Force stop. Stel je netwerk/wifi in. Ga terug naar Apps&Notifications en klik op Open. Vooruit in het menu of bevestigen is linker-muisknop. Terug of annuleren is rechter-muisknop.

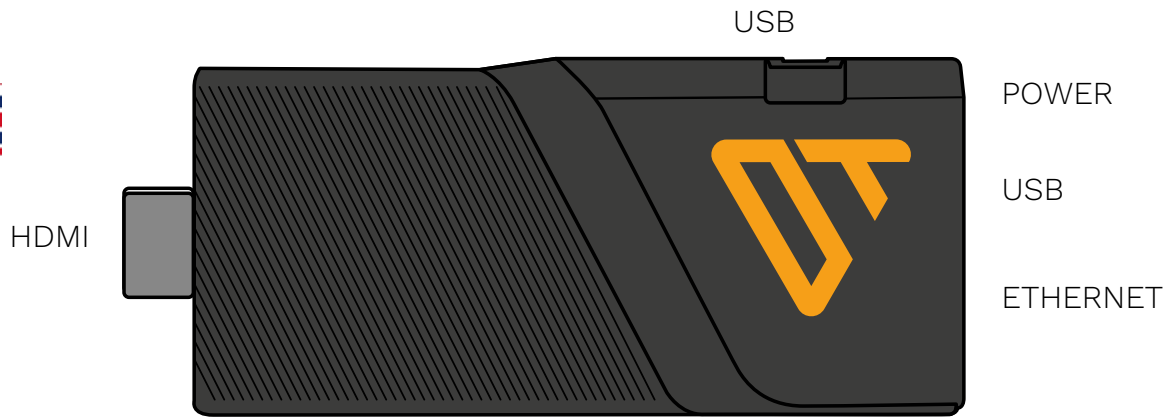

ETHERNET OR WIFI INSTRUCTION

TECHNICAL SPECIFICATIONS OF THE PLAYER

Model: HD 2214
CPU: 4 Core Cortex A57
RAM: 2 GB
ROM: 1 GB
Power Supply: USB via the screen (cable included)

INTERNET VIA ETHERNET

1. A standard internet connection is sufficient.
2. Upload: >1 Mbps, Download: >1 Mbps

INTERNET VIA WIFI

1. Upload: >1 Mbps, Download: >1 Mbps
2. Latency: 150ms or better
3. WiFi Signal Strength (RSSI): -55 dBm or stronger
4. Uptime: Ideally, we require a constant and reliable network connection 24/7.

SECURITY

If desired, we can provide the LAN or WiFi MAC address of the player.

PLAYER SETTINGS

Usually, our technicians connect the player to the network. If that's not the case, you can follow these steps: Connect a mouse to one of the player's ports. Move your mouse to the upper-left corner of the screen and quickly click the left mouse button 5 times. Now, you will see a screen displaying all the properties of the player, including the network connections. Go to Network & Internet, then to Wi-Fi. You can now click on the Wi-Fi connection and enter the password. If your password is long or complex, connect a keyboard to the other USB port of the player. The time to set the password is very short. If the time is too short, go to Apps & Notifications. Click on Look Player, then select Force Stop. Set up your network/Wi-Fi. Go back to Apps & Notifications and click on Open. To navigate forward in the menu or confirm, use the left mouse button. To go back or cancel, use the right mouse button.